


Luxor Push Button pen



Needed:

7mm Mandrel; bushing 112A; drill 8mm

Preparing the blank


1. Cut the blank 1/4" longer than the brass tube so you can square the ends off once the tube is glued in.
2. Drill the blank through the center, lengthwise, with an 8mm bit.
3. Scuff the brass tube with sandpaper to clean off the oxidation and give the glue a better adhesion surface.
4. Plug the ends of the tube with a material of your choice – we recommend base plate wax – to keep the glue from getting into the tube. Push the tube ends into a thin section of the material to form a plug. *This is important – glue inside the tubes is a common cause of kit failure.*
5. Roll the tube in the glue then insert it into the blank using a twisting motion until the tube is equidistant between both ends of the blank.
6. Set aside until the glue has had time to reach its maximum strength.
7. When the glue has cured, remove the plugs from the ends.

william wood-write

penblanks.ca

8. Using a barrel trimmer of the proper size, square off the ends of the blank until you can see bright brass tube. STOP at this point. This can also be done with the proper jig and a disk sander. *Shortening tube is another common cause of kit failure.*

Turning the blank

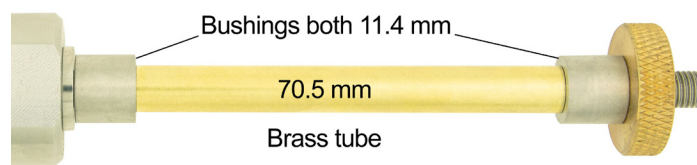

1. Assemble the blank on the mandrel using the 112A bushings, following the diagram above.
2. Lightly tighten the mandrel and secure. Do not over-tighten the brass nut – this can bend the mandrel which will result in an oval pen.
3. Turn the pen blank to the desired shape using the bushings as a sizing guide.
4. After turning, sand the surface in progressive steps until you get to 400 or 600 grit. For a smooth finish, continue sanding with Micro Mesh from 1,500 to 12,000 grit.

5. Apply a finish of your choice and remove the blank from the mandrel.

Assembling the pen

1. Press the nib assembly into one end of your finished blank.
2. Slide the clip onto the finial. Press this finial/clip assembly into the other end of your finished blank.
3. Screw the transmission into the finial.
4. Unscrew the nib tip and insert the refill with the refill extender and spring attached.
5. Screw the nib back on over the refill.

